


Spare Parts

Unloader ST-291

Item-No. 20 0291 500

3al-service.ru

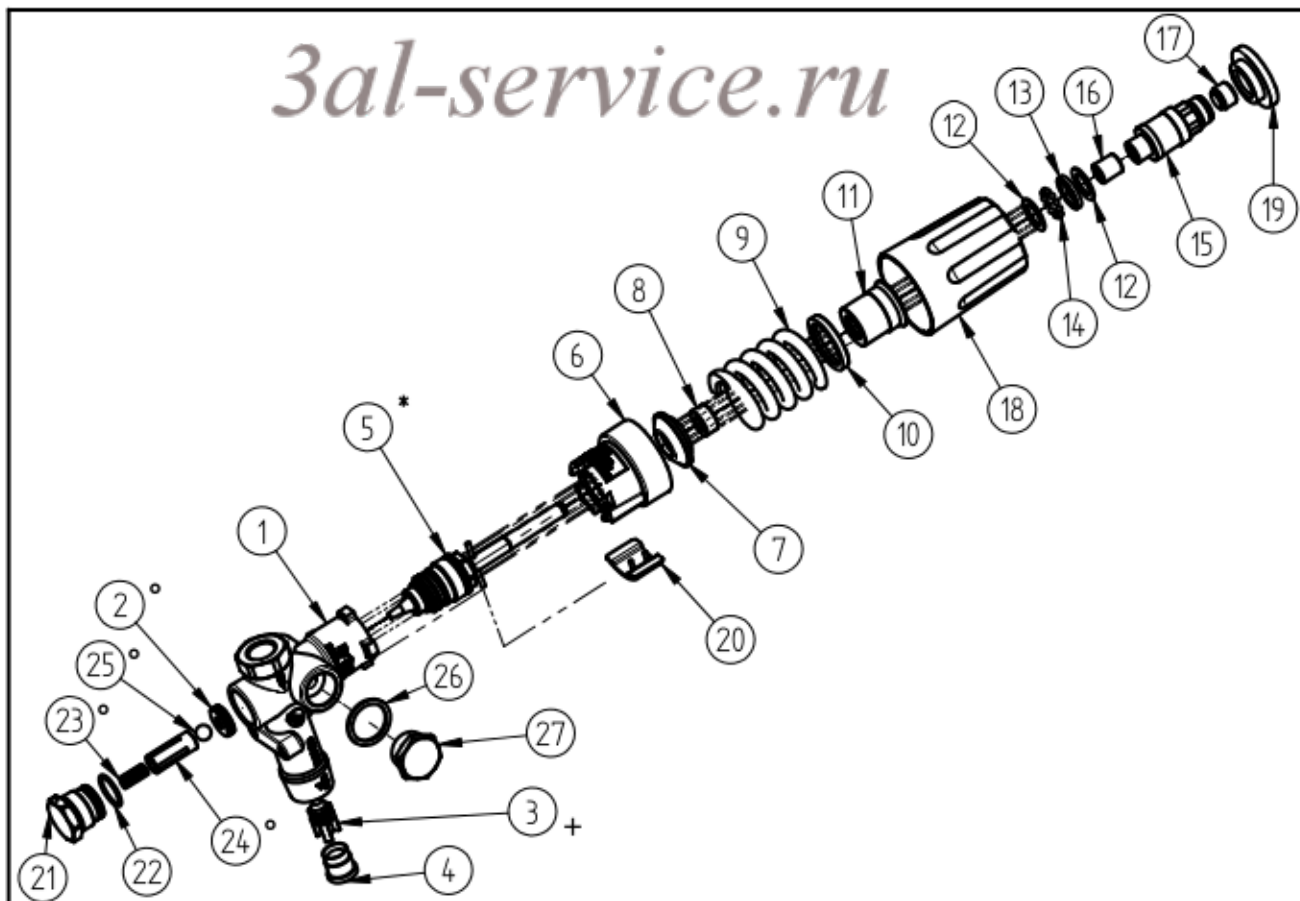

| Pos. | Item-No. | Description | Pos. | Item-No. | Description |
|------|-------------|----------------------|------|-------------|-----------------|
| 1 | 01 0001 695 | housing ST-291 | 15 | 01 0009 020 | adjusting screw |
| 2 | 20 0291 465 | Seal Seat | 16 | 01 0009 115 | arresting screw |
| 3 | 20 0291 480 | check valve | 17 | 01 0000 356 | locking screw |
| 4 | 01 0001 700 | protection screw | 18 | 02 0012 055 | handle |
| 5 | 20 0291 470 | Piston Rod | 19 | 02 0012 065 | locking screw |
| 6 | 02 0012 060 | spring adaptor | 20 | 02 0012 070 | clip |
| 7 | 01 0009 030 | compensating disk | 21 | 01 0009 105 | screw |
| 8 | 10 0004 460 | adjusting ring | 22 | 05 0001 021 | O-ring 17 x 15 |
| 9 | 06 0002 065 | pressure spring | 23 | 06 0002 085 | pressure spring |
| 10 | 01 0009 025 | plate | 24 | 02 0012 105 | ball receiver |
| 11 | 01 0009 100 | spring guide | 25 | 06 0000 740 | steel ball |
| 12 | 04 0001 720 | Pressure washer | 26 | 01 0003 295 | sealing ring |
| 13 | 02 0003 370 | Roller holder | 27 | 01 0000 375 | plug |
| 14 | 06 0000 900 | Stainless steel ball | | | |

Repair-Kits

| Pos. | Item No. | Description | Pos. | Item No. | Description |
|------|-------------|-----------------------|------|-------------|------------------------|
| * | 20 0291 495 | Repair-Kit Piston Rod | + | 20 0291 490 | Repair-Kit Check Valve |
| ° | 20 0291 485 | Repair-Kit Seal Seat | | | |